 




OPERATING INSTRUCTIONS

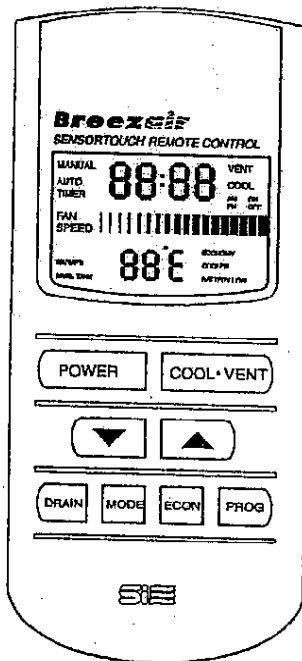

ILL239B

Breezair

Keep this manual for future reference



At Seeley International we appreciate the choice you have made in the purchase of a Breezair Ducted Air Conditioner.

Breezair has been designed to provide you with quiet, reliable, cool comfort when you need it.

Your Breezair system has a number of unique features that will allow you to enjoy air conditioning best suited to your requirements.

We would ask you to take a few moments to read the Operating Instructions carefully to enable you to gain the most from your investment.

Your **SENSORTOUCH** Control is designed to give you the convenience of operating your Air Conditioner from any convenient place inside your home. Because this product is a radio control, it does **not** have to be pointed towards the Air Conditioner to work.

SENSORTOUCH can control your Breezair system at your fingertips while you watch television or from your bedside table.

While the control unit is designed to be portable and is quite robust, it does contain electronic sensing devices that may sustain damage through continued rough handling.

Located in the control unit are temperature sensing devices which may be affected if the Controller is placed in direct sunlight. (It will think it is unusually hot and increase the cooling effort to counter the high heat load being sensed by the Controller).

IMPORTANT:

Due to the nature of Radio Data Transmission the Air Conditioner may take up to one second to respond to a change in operation. During this time the data is being sent, the transmission code is being verified, and the data is being checked for errors.

INSTALLER:

The last person involved in installation at the site must check the operation of the control in selected rooms in the house and mark the results in the boxes below. Also, mark the TRANSMISSION CODE in the boxes below, and sign your name after completion of these tasks.

ROOM 1	ROOM 2	ROOM 3
OK <input type="checkbox"/> No-Go <input type="checkbox"/>	OK <input type="checkbox"/> No-Go <input type="checkbox"/>	OK <input type="checkbox"/> No-Go <input type="checkbox"/>


TRANSMISSION CODE

1 2 3 4 5 6 7 8 9 10

(see inside battery cover for factory set code)

ILL283

signature

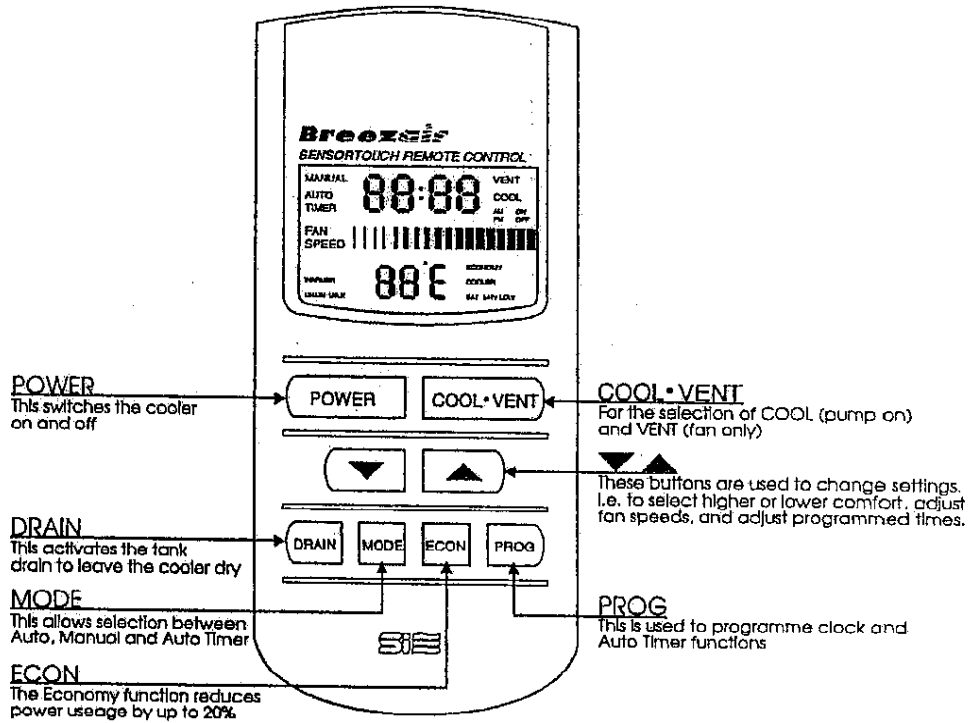


ILL212B

1. Turn the unit on by pressing the power button.

The Air Conditioner will start on the previously used setting. If you require Automatic (page 5), Manual (page 8), or Auto Timer (pages 6 & 7) then these can be selected by pressing the MODE button.

2. In Auto the ▼ and ▲ buttons allow you to adjust the comfort level at which the Air Conditioner will automatically operate.

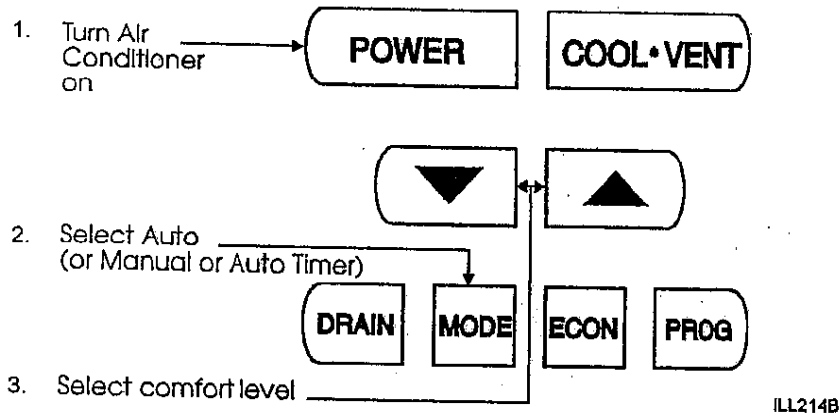

Your Breezair will now operate automatically to maintain the comfort level selected. As the required comfort level is reached the Air Conditioner will automatically stop. The Air Conditioner will re-start automatically if the conditions inside your home vary from the comfort level selected.



ON/OFF

Your **SENSORTOUCH** is switched on and off by pushing the **POWER** button.

Your **SENSORTOUCH** will remember any previous settings, however by using the **MODE** button you can select between Automatic, Manual or Auto Timer control.

AUTO

During Auto control the room temperature is compared to your set comfort level and the optimum Air Conditioner operation is controlled automatically. As the room temperature changes, the Air Conditioner operation is adjusted automatically. We recommend that the control unit be kept in its wall bracket and that it is mounted away from direct sunlight. The control unit is sensing room conditions and direct sun will influence the comfort control settings.


During Auto control you can use all other functions except the **COOL-VENT** button, as this is controlled automatically.

COMFORT LEVEL


Ten levels of comfort are provided by the **SENSORTOUCH**. During Auto control, pressing the ▼ or ▲ button adjusts the level of required comfort. The display

will show your selection by indicating a set level between 1 and 10. "COOLER" or "WARMER" will be displayed when the setting is changed.


The control will wait for a further 8 seconds before recalculating the new operating conditions and transmitting them to your Air Conditioner.

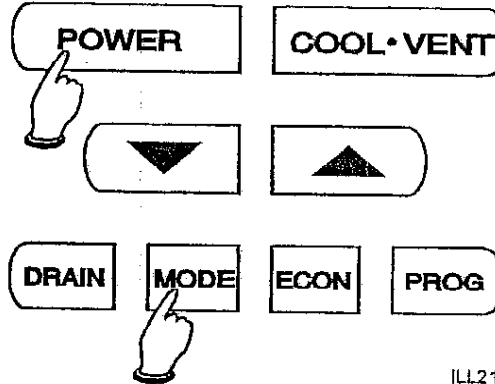

ILL213

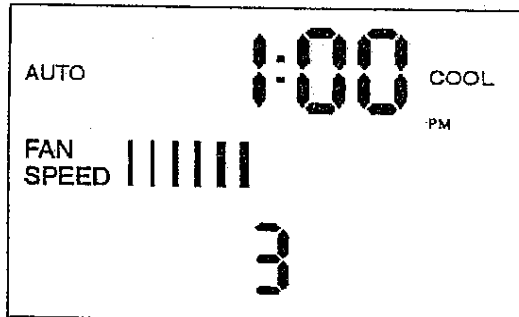


ILL215

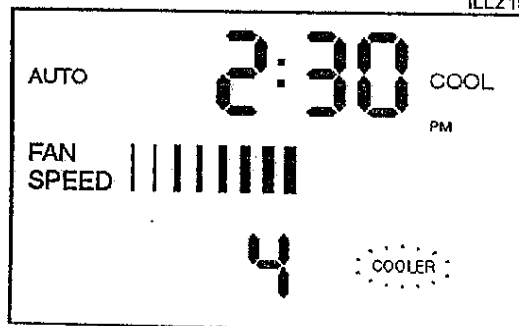

ILL215

AUTO TIMER


The Auto Timer can be selected using the MODE button. However, the operating times must be programmed first. Once Auto Timer is selected the air conditioner will only operate during the programmed time period.

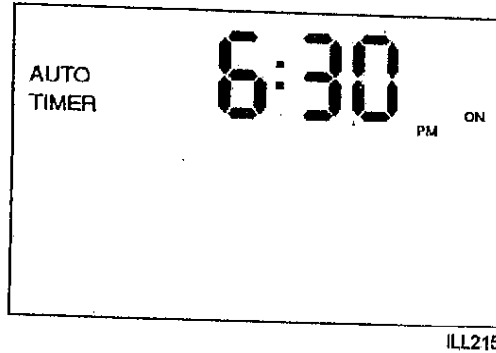

ILL215

**PROGRAMMING THE
TIMER**

This can be done with the **SENSORTOUCH** operating in Manual, Auto or Auto Timer modes. There are only 6 steps involved with programming the Auto Timer, begin by pressing the PROG button.

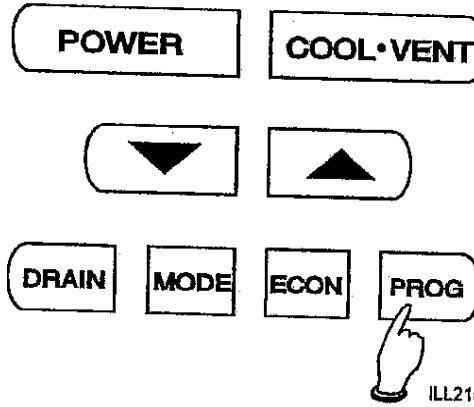

ILL215

**PROGRAMMING THE
TIMER**

1. Set the ON TIME hours.
2. Set the ON TIME minutes.
3. Set the OFF TIME hours.
4. Set the OFF TIME minutes.
5. Set the Comfort Level (1-10).
6. Set Economy mode on/off.

To change between each of the first 5 steps, press the PROG button.


The setting being changed flashes once per second.

To change the set value, use the ▼ or ▲ button.

If no buttons are pressed for 8 seconds, the programming mode will finish.

Programmed settings are stored in memory and you can re-use the Auto Timer daily without having to change them.


To change a particular setting, press the PROG button repeatedly until the setting to be changed is flashing.

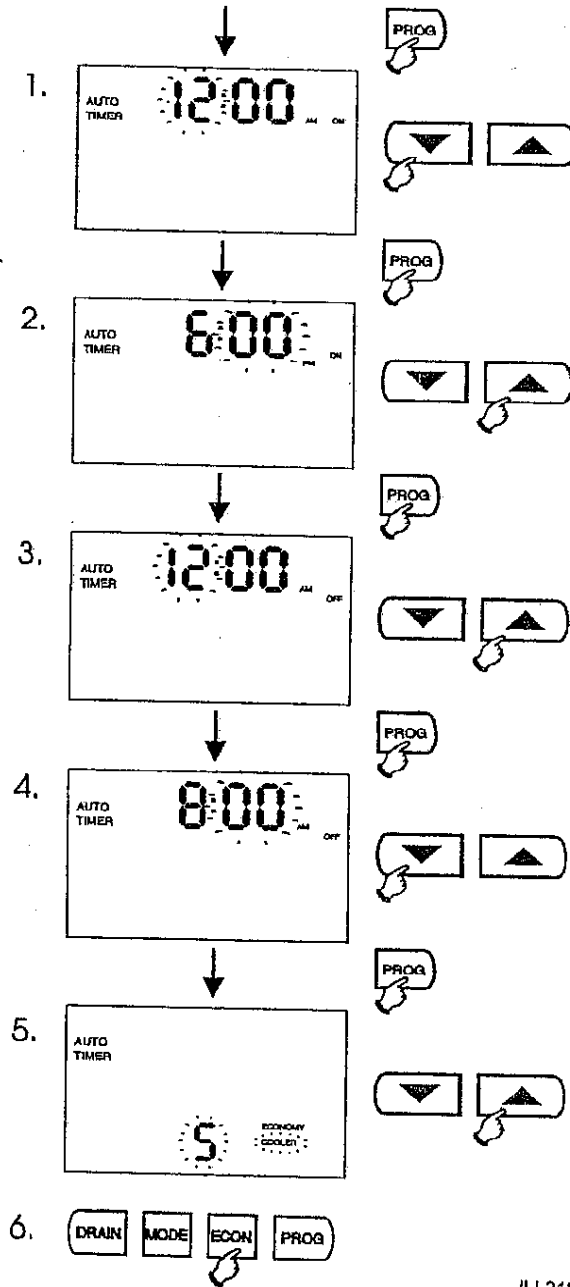

MANUAL

Selecting Manual control using the MODE button will allow COOL (pump on) or VENT (fan only) to be selected.


During ventilation, fresh air is drawn in without being cooled.

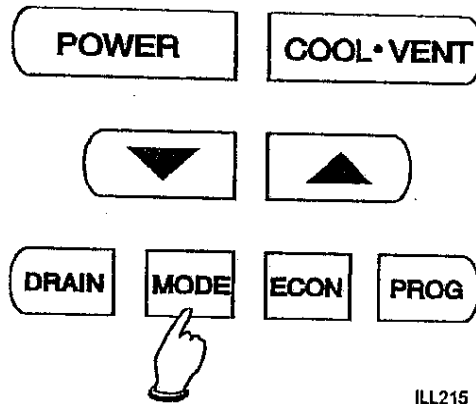

ILL215

MANUAL

Once COOL or VENT has been selected, your *SENSORTOUCH* will maintain a constant fan speed as shown by the bar graph.

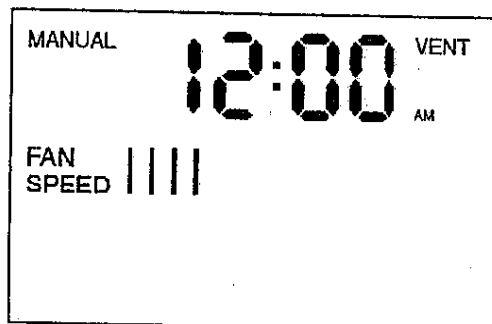


ILL215

MANUAL

To increase the amount of required cooling or ventilation press the ▲ button.


To decrease the amount of required cooling or ventilation press the ▼ button.

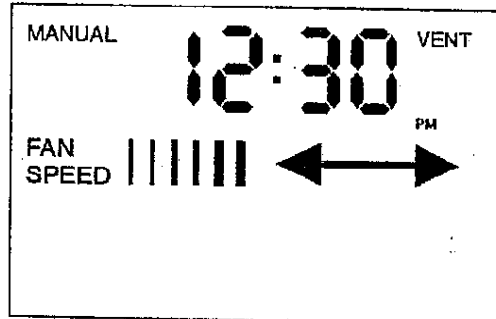

ILL215

ECONOMY

Selecting ECONOMY limits the available cooling or ventilation, and reduces power used by up to 20%. The ECONOMY function can be used in either Auto, Manual or Auto Timer modes.

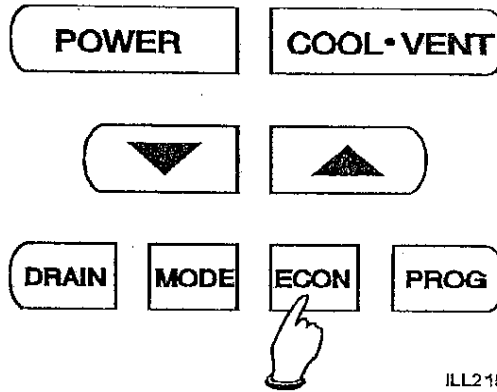


ILL215

DRAIN

The Drain button allows you to open the drain valve in the tank of the Air Conditioner and empty the water from the tank. This will leave the tank clean and dry, and switch the Air Conditioner off.

The Drain button may be used instead of POWER to switch the Air Conditioner off. If the unit has not been used for 7 days the control will automatically drain the tank to maintain the cleanliness of the system.

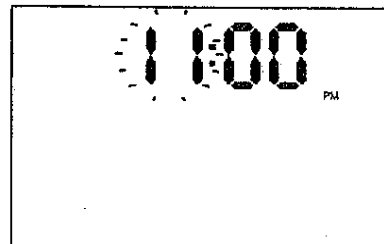


ILL215

CLOCK SETTING

Clock can only be set when the control is switched OFF.

Hold the PROG button down for over 3 seconds. Use the ▼ and ▲ buttons to change the time.

Press the PROG button once to change between hours and minutes. If no buttons are pressed for 8 seconds, the clock set mode will finish.

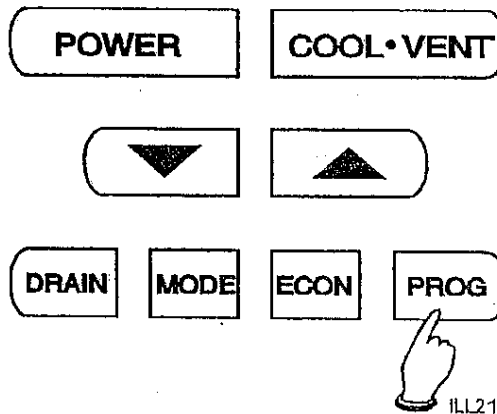


ILL215

DIP SWITCHES

There are 2 rows of DIP (Dual In-line Package) switches located under the battery cover of the portable control.

Definition of dip switch positions is as follows:

- A RESERVED FOR LATER USE
- B OFF 12 HOUR CLOCK
- B ON 24 HOUR CLOCK
- C OFF WATER MANAGER OPERATION
- C ON BOREWATER SETTING
- D OFF 380 / 550 / 750 W MOTOR
- D ON 1100W / 1500W MOTOR
- 1 - 10 TRANSMISSION CODE

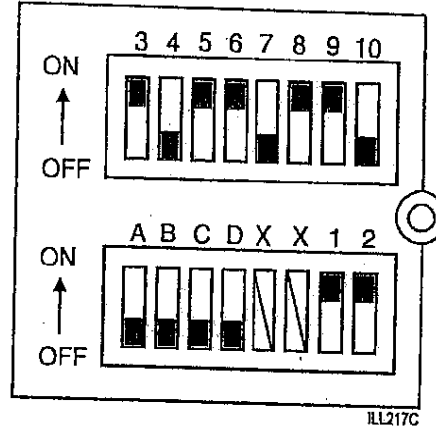

HELP / SERVICE / WARRANTY

HELP:

This section might help solve problems which may occur with the **SENSORTOUCH** control.

SYMPTOM

My Air Conditioner does not respond to the portable control

My Air Conditioner always switches off, even if the portable control is on

The display of my control stays blank

POSSIBLE CAUSE

- the transmission codes in the Air Conditioner and portable control do not match.
- flat batteries, is the BATTERY LOW indicator on?
- signal interference, try another location for the portable control.
- There is a safety shutdown feature in the event transmissions are not received. The batteries may be flat, or the control is in a bad location to transmit from.
- Operation in Auto mode will shut the Air Conditioner off if the room temperature drops below your set comfort level.
- The batteries may be completely flat, try replacing them.
- If the batteries are new, check they are inserted around the right way.
- Call the Breezair Service Department.

IF YOU NEED SERVICE

and you are in:

- Metropolitan ADELAIDE, please ring 374 0319
- Metropolitan PERTH, please ring 008 819717

- Metropolitan MELBOURNE, please ring 008 882644
- Elsewhere in Australia, please contact your Breezair Dealer direct.

WARRANTY:

Your Breezair **SENSORTOUCH** is covered by a two year warranty against failure due to any fault in parts or workmanship.

As the policy of this company is one of continuous product improvement, all specifications are subject to change without notice.

835570C

9411