



INSTALLATION MANUAL

TBQV Evaporative Cooler

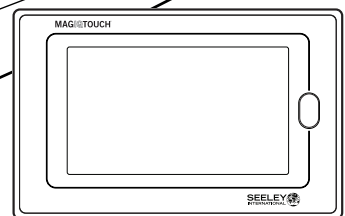
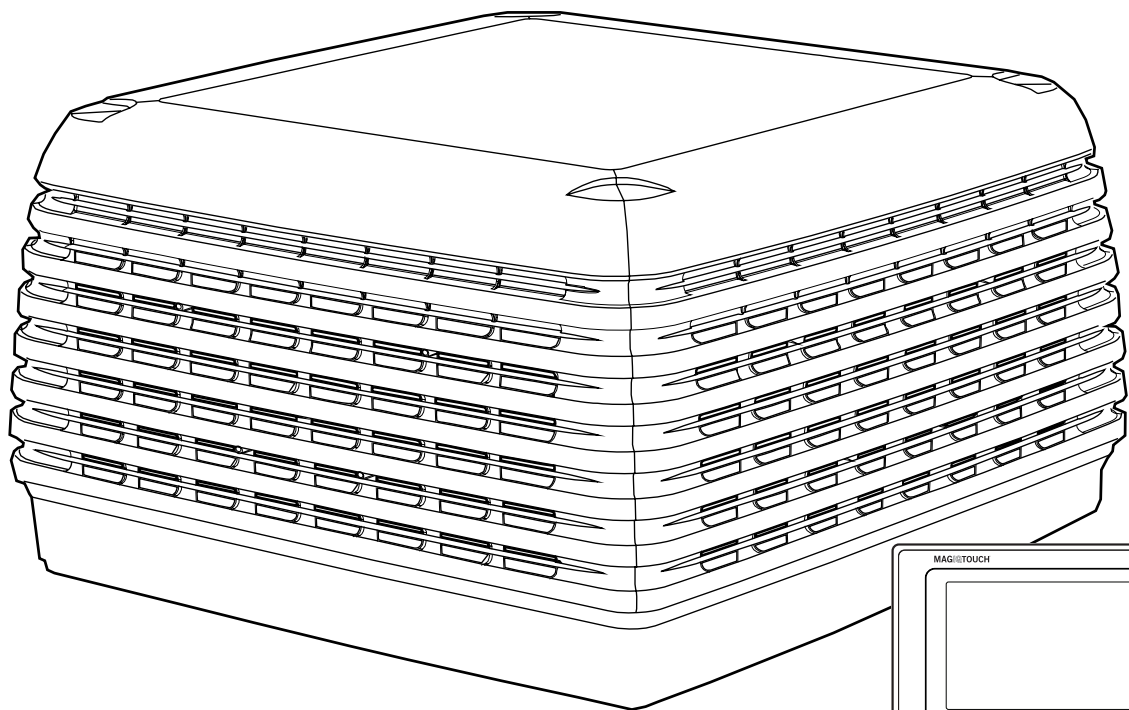


TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTIONS	2
QUICK GUIDE	4
INSTALLATION INSTRUCTIONS	6
COOLER LOCATION	6
ACCESS FOR SERVICING AND MAINTENANCE	6
REMOVING THE VENTURI	6
REMOVING THE TRANSITION	7
PREPARING THE DROPPER (ROOF JACK)	7
MOUNTING THE DROPPER (ROOF JACK)	7
SECURING DROPPER (ROOF JACK) & TRANSITION	8
WEATHERSEAL (OPTIONAL)	8
EXISTING/REPLACEMENT INSTALLATIONS	9
FITTING THE OPTIONAL LEG SUPPORT KIT	10
CONVEYING THE COOLER TO THE ROOF	11
MOUNTING THE COOLER	11
CABLE INSTALLATION	12
INSTALLING THE VENTURI / FAN ASSEMBLY	12
WATER REQUIREMENTS	13
INSTALLING THE FLOAT VALVE	13
INSTALLING THE INLET SOLENOID	13
INSTALLING THE WATER SENSOR	14
MAINS WATER CONNECTION	14
INSTALLING THE DRAIN VALVE	14
ELECTRICAL REQUIREMENTS	15
ELECTRICAL CONNECTION	15
CONNECTING THE WATER PUMP	16
MULTIPLE COOLER INSTALLATIONS	16
CONNECTING THE MAGIQTOUCH CONTROLLER	17
MAGIQTOUCH CONTROLLER DISPLAY INFORMATION	17
SETTING THE WATER LEVEL	18
COMMISSIONING THE COOLER	18
TEST OPERATION	18
REFITTING THE PAD FRAMES	18
TESTING THE PUMP	18
TESTING THE DRAIN VALVE	18
COMMISSIONING COMPLETION CHECKLIST	19
ADJUSTING COOLER SETTINGS	20
FAULT CODES	20
TROUBLE SHOOTING	21

WARNING! Failure to install and commission the product in compliance with these instructions, or failure to do the job properly and competently, may void the customer's warranty. Further, it could expose the Installer and/or the Retailer to serious liability.

IMPORTANT SAFETY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

Means for all pole disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The following specifications for the cooler water supply are required:

Min Water Pressure: 100kPa (15psi)

Max Water Pressure: 800kPa (115psi)

New hose sets supplied with the appliance are to be used and old hose-sets should not be re-used.

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- a) Installation work and electrical wiring must be done by qualified person(s) in accordance with all applicable codes and standards, including fire-rated construction.
- b) When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- c) Ducted fans must always be vented to the outdoors
- d) Do not use this fan with any solid-state speed control device.
- e) Do not use replacement parts that have not been recommended by the manufacturer (e.g. parts made at home using a 3D printer).

EMPLOYER AND EMPLOYEE RESPONSIBILITIES

The installation and maintenance of evaporative coolers at height has the potential to create Occupational Health and Safety issues for those involved. Installers are advised to ensure they are familiar with the relevant State and Federal legislation, such as Acts, Regulations, approved Codes of Practice and National

Standards, which offer practical guidance on these health and safety issues. Compliance with these regulations will require appropriate work practices, equipment, training and qualifications of workers.

Seeley International provides the following information as a guide to contractors and employees to assist in minimising risk whilst working at height.

INSTALLER AND MAINTENANCE CONTRACTORS - RISK ASSESSMENT

A risk assessment of all hazardous tasks is required under legislation. A risk assessment is an essential element that should be conducted before the commencement of work, to identify and eliminate the risk of falls or to minimise these risks by implementing control measures. There is no need for this to be a complicated process, it just is a matter of looking at the job to be done and considering what action(s) are necessary so the person doing the job does not injure themselves.

This should be considered in terms of:

- What are the chances of an incident happening?
- What could the possible consequence be?
- What can you do to reduce, or better still, completely get rid of the risk?

SOME POINTS TO CONSIDER

- What is the best and safest access to the roof and working areas?
- If a worker is alone, who knows they are there and if they get into difficulty, how can they summon help? (Call someone on the ground? Mobile phone? Etc.)
- What condition is the roof in? Should the trusses, underside or surface be checked?
- Does the worker have appropriate foot wear? (Flat sole jogger type is advisable.)
- Are all power cables / extension leads safe and appropriately rated?

IMPORTANT SAFETY INSTRUCTIONS

- Are all ladders, tools and equipment suitable in good condition?
- Where ladders are to be used, is there a firm, stable base for them to stand on? Can they be tied or secured in some way at the top? Is the top of the ladder clear of electricity supply cables?
- Is there a roof anchor to attach a harness and lanyard to? If so, instruction should be issued for the use of an approved harness or only suitably trained people used.
- Are all tools and materials being used, prevented from slipping and falling onto a person at ground level? Is the area below the work area suitably protected to prevent persons walking in this area?
- Does the work schedule take into account weather conditions, allowing for work to be suspended in high winds, thunder storms/ lightning or other types of weather giving wet, slippery surfaces?
- Is there an on-going safety check system of harnesses, ropes, ladders and access/lifting equipment and where they exist on roofs, anchor points before the commencement of work?
- Is there a system which prevents employees from working on roofs if they are unwell or under the influence of drugs or alcohol?
- Are there any special conditions to consider i.e. excessive roof pitch, limited ground area, fragile roof, electrical power lines?

Ensure the installation complies with all local and national regulations with regards to electrical, plumbing and bushfire (wildfire) construction requirements.

OTHER IMPORTANT REQUIREMENTS

- Never force parts to fit because all parts are designed to fit together easily without undue force.
- Never drill holes in the tank (reservoir) of the cooler.
- Check the proposed cooler location, to ensure that it is structurally capable of supporting the weight of the cooler, or provide an adequate alternate load bearing structure.

QUICK GUIDE

Step 1

SAFETY

Read and understand safety section.




Page 2

Step 2

COOLER LOCATION

Check cooler location. Consider regulations. Discuss with customer.

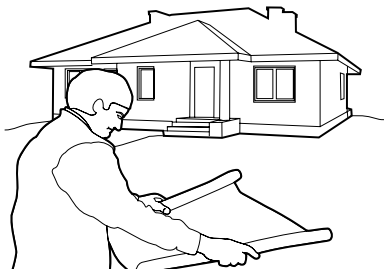


Page 6

Step 3

REMOVE VENTURI

Press clip or remove screws on both sides of venturi to release.

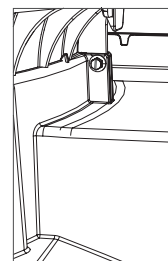


Page 6

Step 7

CHECK WEATHERSEAL

Check operation of Weatherseal. Ensure Weatherseal moves freely.

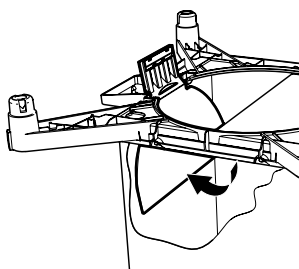


Page 8

Step 8

CONVEY COOLER TO ROOF

Always use 2 persons to position cooler when handling manually.

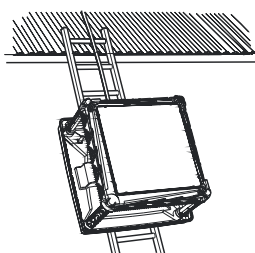


Page 11

Step 9

MOUNT COOLER

Lower cooler onto transition.

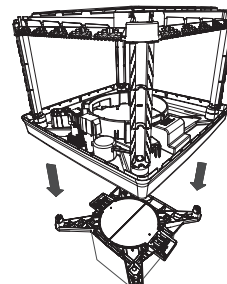


Page 11

Step 13

INSTALL INLET SOLENOID

Use supplied hose set and fittings. Note water flow direction marking on solenoid.

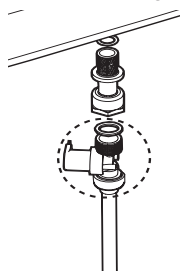


Page 13

Step 14

INSTALL WATER SENSOR

Ensure clip is fully engaged.

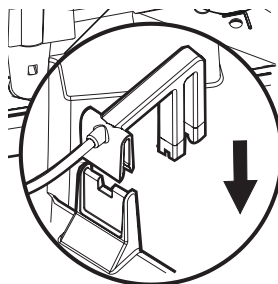


Page 14

Step 15

INSTALL DRAIN VALVE

Never drain waste water directly onto roof. Be sure to use supplied 'O' Rings and fittings.




Page 14

Step 19

SET WATER LEVEL

Turn on mains water and adjust float to allow water to fill to required level.

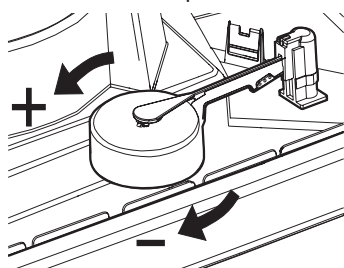

Page 18

Step 20

COMMISSION COOLER

Switch mains power on and test run cooler.

Step 21

FINAL CHECK

Complete commissioning checklist at end of document.



Page 18


Page 19

QUICK GUIDE

Step 4

REMOVE TRANSITION

Press clips inwards to release transition from tank (reservoir).

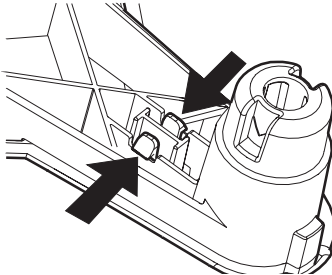


Page 7

Step 5

MOUNT ROOF JACK

Position, level and secure dropper (roof jack). Flash dropper (roof jack) to prevent water ingress into roof cavity.

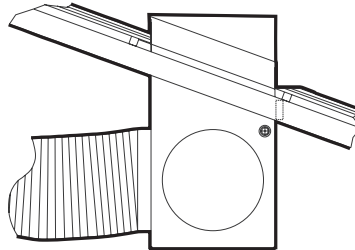


Page 7

Step 6

SECURE ROOF JACK & TRANSITION

Use TEK screws provided. Break transport clips for Weatherseal.

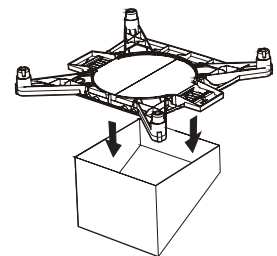


Page 8

Step 10

CABLE INSTALLATION

Run power and control cable down dropper (roof jack) and out through grommet.

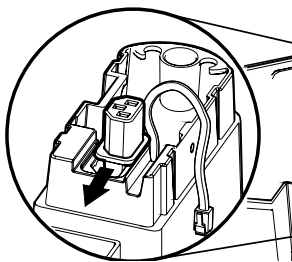


Page 12

Step 11

INSTALL VENTURI / FAN

Ensure venturi is fully located into tank (reservoir) and motor lead is not caught or pinched.

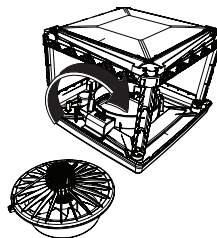


Page 12

Step 12

INSTALL FLOAT VALVE

Assemble float valve to cooler. Ensure all washers and o-rings are in place. No thread tape is required.

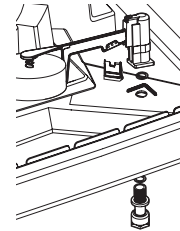


Page 13

Step 16

LOCAL REGULATIONS

Read and adhere to local electrical and plumbing rules and regulations.

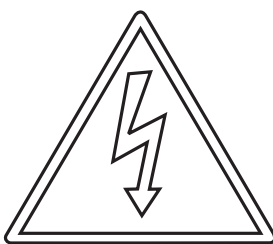


Page 15

Step 17

ELECTRICAL CONNECTIONS


Connect cooler components to electronics module. Plug mains cable into electronics module.

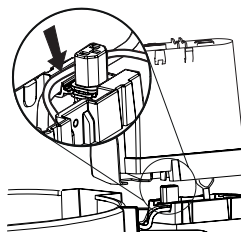

Page 15

Step 18

MOUNT AND CONNECT CONTROLLER

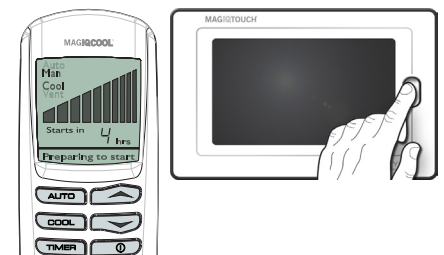

Page 17

Step 22

CLEAN UP

Clean up site.




Page 19

Step 23

CUSTOMER HANDOVER

Show customer how to operate cooler. Provide controller and cooler owner's manuals. Explain maintenance requirements.

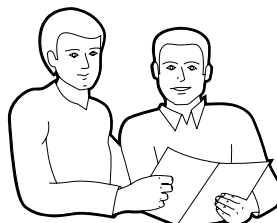

Page 19

INSTALLATION INSTRUCTIONS

COOLER LOCATION


Check proposed cooler location to ensure it is structurally capable of supporting the weight of the cooler. If the roof is structurally inadequate, provide an alternate load bearing structure.

The ideal location for the cooler is in a central position on the roof (away from sleeping areas and where people spend most of their time) so that the duct runs are of approximately the same length. Carefully consider neighbouring residences and noise levels when locating the cooler, if necessary talk to the customer and the neighbour before carrying out the installation.

Always locate the cooler where it will receive adequate fresh air and not in a recess where it may be starved for air or where the air is polluted.

Ensure location is a minimum of:

- 3m (10') from a solid fuel heater flue,
- 1.5m (5') from a gas flue,
- 1.0m (3.5') away from adjacent solar panels or similar roof mounted fixtures,
- 5m (17') from a sewer vent, and
- 600mm (2') from a wall.

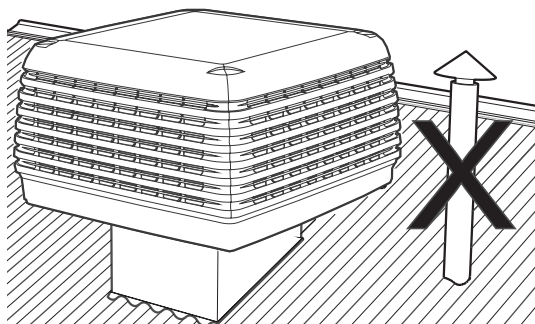

ILL 1150

- The cooler must be mounted at least 3m (10') (preferably 5m (17')) away from any TV antenna or antenna cables. Make sure the cooler is not between the antenna and the transmission tower that is providing the television signal to the home.

Allow adequate access to and around the cooler for maintenance. Provision must be made for access to electricity, water supplies and drains.

Note! Do you need to discuss the installation of items like safety anchor points with the customer?


ACCESS FOR SERVICING AND MAINTENANCE

The cooler should be installed in a position that allows adequate access for installation, and future maintenance and servicing activities. This should comply with installation guidelines and any local, State and National regulations.

Consider the following for installation location:-

- Which has clear access to and around the cooler
- Which is clear of fixtures in line with below clearances
- Which is clear of fall edges (> 3m or 10' away)
- Which is structurally capable of supporting the weight of the cooler and service technicians

Required clearances around the cooler for future maintenance and servicing are shown adjacent.

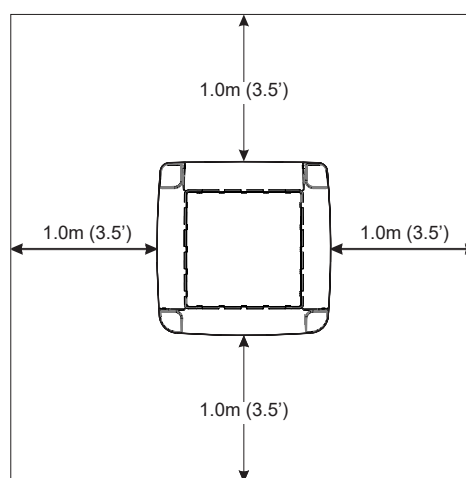


ILL 2645

Extra service or warranty charges may apply for the cost of any equipment or additional labour involved in accessing the cooler if these guidelines are not met.

REMOVING THE VENTURI

Before removing the venturi, the electronics module should be removed.

Disconnect the electronics module from the tank (reservoir) by removing the screw under the switch. The isolation switch cannot be activated with this screw removed. Remove the pump and motor cables from the plugs in the electronics module.

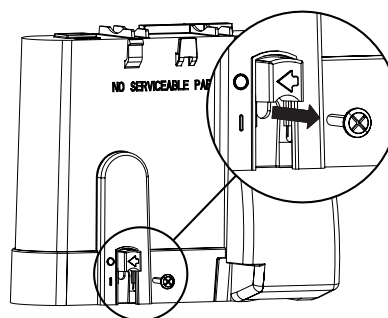


ILL 1053

Note! Place the electronics module and the screw safely to one side for later use. Do not re-fit the electronics module, as the motor plug will require connection to the underside of the module when the venturi is refitted into the cooler.

INSTALLATION INSTRUCTIONS

Remove the 2 screws securing the venturi to the tank (reservoir).

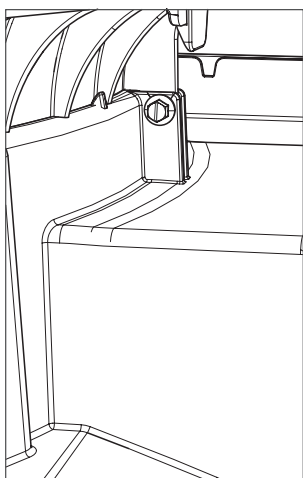

ILL2111


Lift the venturi and fan assembly out of the cooler, taking care of the motor lead(s).

The venturi and fan assembly can be placed on to the ground until the rest of the cooler has been installed on the dropper (roof jack).

REMOVING THE TRANSITION

Turn the cooler onto its side to remove the transition. There are clips in each of the four corners that will disengage once the transition is given a firm pull.

If any of the corners are difficult to remove, do not use excessive force. Gently squeeze the clips together and remove the transition one corner at a time.

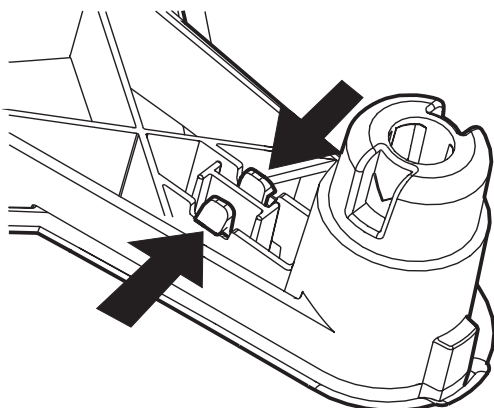

ILL987

PREPARING THE DROPPER (ROOF JACK)

The 550 x 550mm (21 $\frac{5}{8}$ " * 21 $\frac{5}{8}$ ") dropper (roof jack) duct must have a raw edge or safe edge at the top. Do not fold in a flange as this may interfere with the transition and/or Weatherseal.

MOUNTING THE DROPPER (ROOF JACK)


Install the dropper (roof jack) and securely fix it to the roof structure on 3 sides. This may require the addition of extra structural timber.

Important! The dropper (roof jack) must never sit directly on ceiling joists or beams, as this may cause noise or vibration issues, and possible ceiling damage.

Ensure the top of the dropper (roof jack) is level and square in all directions (use a spirit level). This helps with levelling the cooler.

The installer must ensure the dropper (roof jack) is suitable, and is secured adequately for wind conditions at the site. Additional restraints may be required if the cooler is more than 200mm (8") higher than the roof timbers, or design wind velocity at the site exceeds 43m/s (141fps).

In exposed or very high wind areas use 16 screws, minimum shank diameter 5.2mm (7/32") to secure the dropper (roof jack). In areas subject to hurricanes/windstorms or where the cooler is located more than 8m (26') above the ground seek advice from a structural engineer.

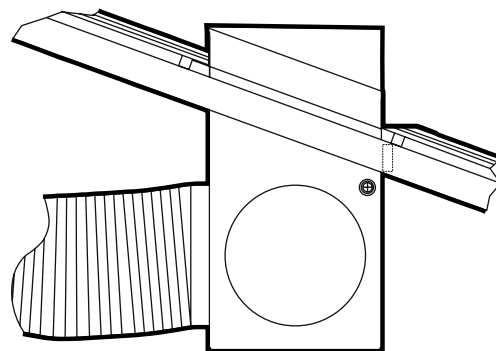


ILL1683-A

The dropper (roof jack) may now be flashed to the roof. Make sure there is no chance of water entering the roof space.


INSTALLATION INSTRUCTIONS

SECURING DROPPER (ROOF JACK) & TRANSITION


Ensure that it is orientated correctly, as shown by the engraved detail on the transition.

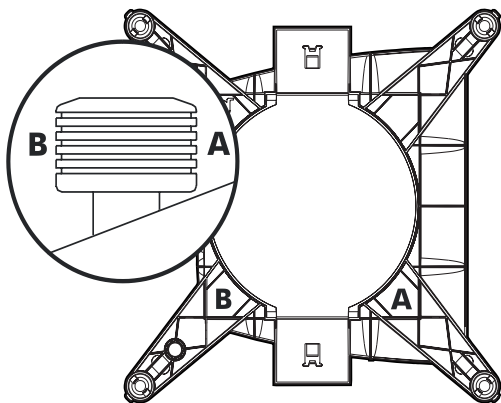


Fit the transition onto the dropper (roof jack) as shown.

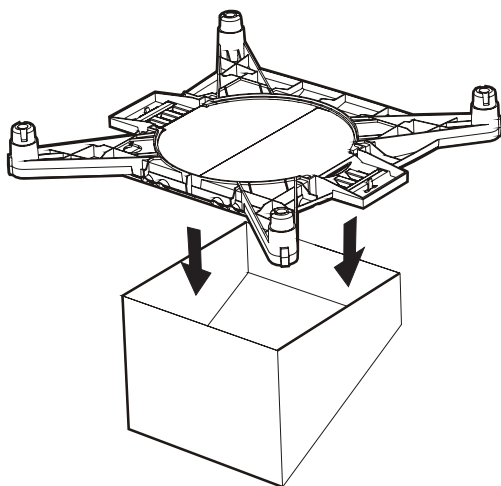

Check the level of the transition on the dropper (roof jack), with a spirit level placed across the flats in both directions.

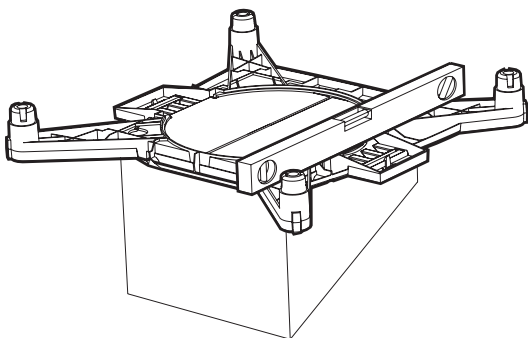

Once level, begin securing the transition to the dropper (roof jack) using the screws provided. There are eight 'V' notch locations for screws.

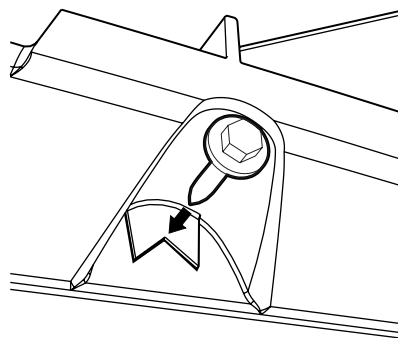

ILL967


Only use the screws provided. These must be used in the correct positions to prevent interference with the Weatherseal. All eight (8) screws must be used. Check the level periodically before driving in all the screws.

Ensure the duct insulation is firmly held against the duct connector flange on the dropper (roof jack).

WEATHERSEAL (OPTIONAL)


NOTE: Optional Weatherseals can only be used on new installations with a 550 x 550mm (21 $\frac{1}{2}$ " * 21 $\frac{1}{2}$ ") dropper (roof jack).

Break off both clips on the transition that retain the Weatherseal flaps. Ensure that the Weatherseal flaps open all the way and do not interfere with the dropper (roof jack) or any screws. The flaps should move freely through 90°.

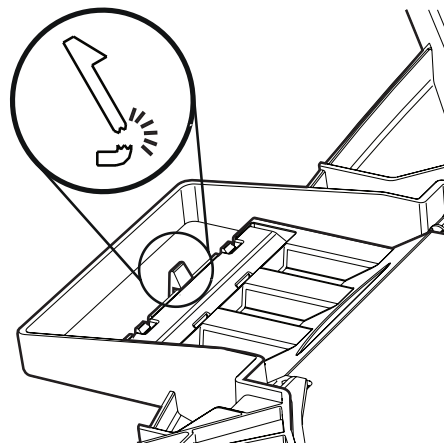

ILL983

Important! There must be no obstructions to the Weatherseal opening fully as it will adversely affect the performance of the cooler.

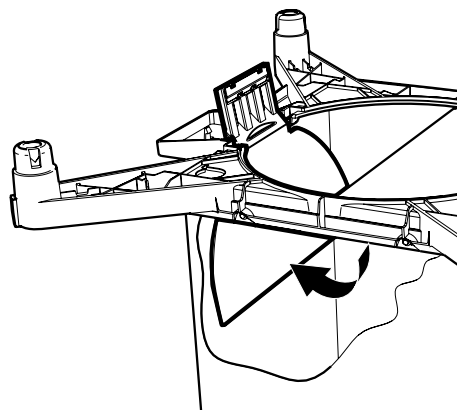

ILL988


INSTALLATION INSTRUCTIONS

EXISTING/REPLACEMENT INSTALLATIONS

The TBQV is designed for a dropper (roof jack) which is 550 x 550mm (21 ⁵/₈" x 21 ⁵/₈") and made from 24G steel which will be able to support the entire weight of the unit. On existing/ replacement installations ensure a suitable dropper (roof jack) is used.


Note: On smaller droppers (roof jacks), duct adaptors may be used. The TBQV5500 comes with 450 x 450mm (17 ³/₄" x 17 ³/₄") adaptors and the TBQV7500 comes with 500 x 500mm (19 ³/₄" x 19 ³/₄").

Assemble the duct adaptor as shown using the interlocking slots ensuring the flat surfaces are on the inside of the adaptor.

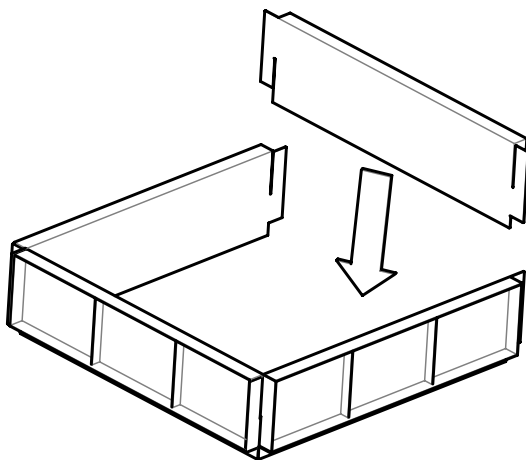

ILL2848


Place the adaptor in the transition and screw in place using the screws provided. Ensure the screws go through both the transition at the eight "V" notch locations and adaptor.

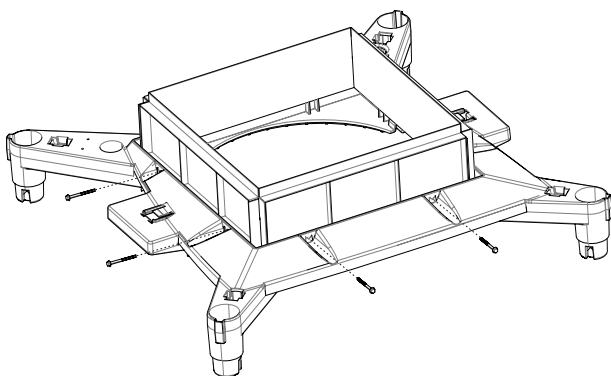

ILL2849

TRANSITION SHOWN UPSIDE DOWN

Place the adaptor and transition onto the duct (roof jack) and using the screws supplied, secure the adaptor in place along the top edge.

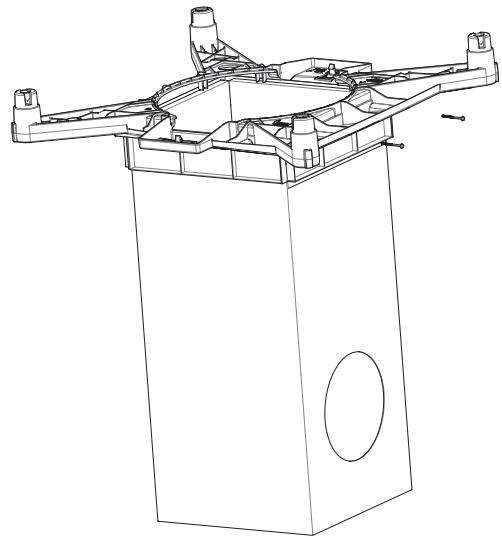


ILL2850

Note: In locations in high winds or where leg supports are required, Seeley International provides a kit. Contact your nearest Seeley supplier for more details.

INSTALLATION INSTRUCTIONS

FITTING THE OPTIONAL LEG SUPPORT KIT

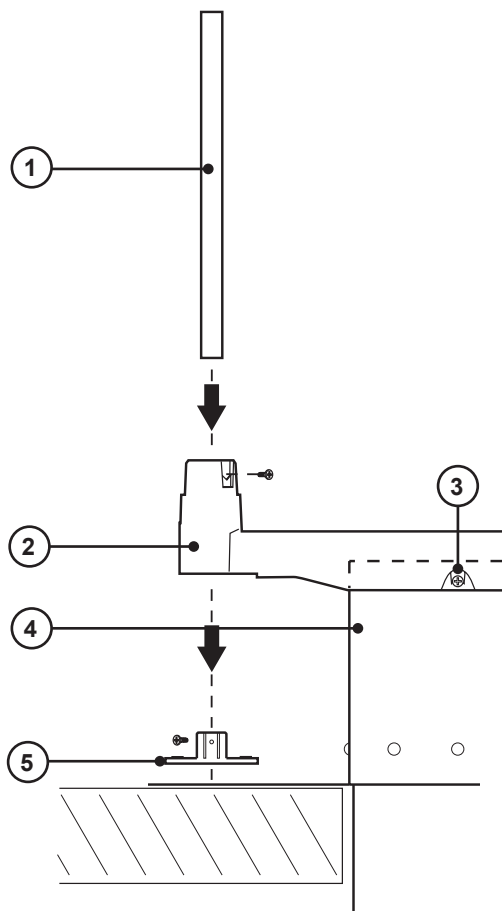


ILL3402

Level and attach the transition (2) to the curb (4).

Pass the support leg (1) through the hole in the transition (2) and into the foot (5).

Fix the transition to the roof jack around the perimeter with the screws supplied (3).

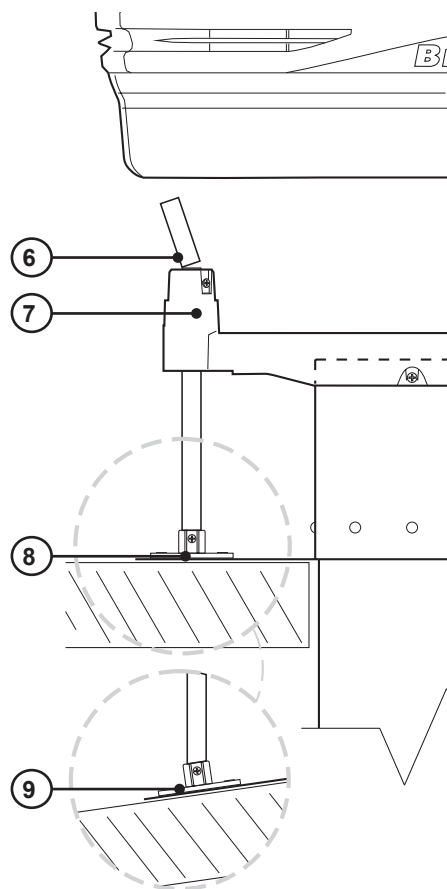


ILL3403

Cut the protruding leg (6) off flush with the top of the transition.

Fix screws (7 & 8).

For angled roof structures orient the foot as shown (9).

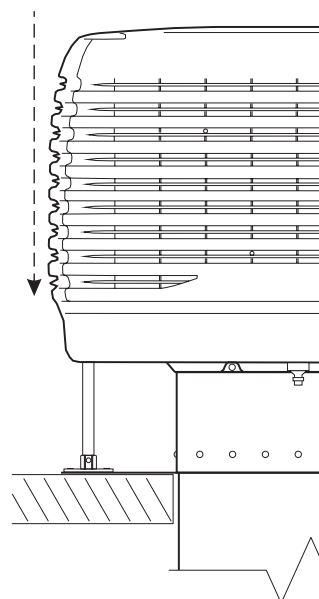

ILL3404

Lower evaporative cooler onto the transition.

ENGINEERS AND INSTALLERS PLEASE NOTE:


The cooler must rely on the curb and duct for its major attachment to the building. The legs shown on this diagram have no performance ratings for down-load or wind-load.

INSTALLATION INSTRUCTIONS

CONVEYING THE COOLER TO THE ROOF


Caution! Do not take risks when raising the cooler to the roof for installation. Use safety equipment, appropriate procedures and always have assistance.

It is recommended that at least 2 people move the cooler into position and that the transition, pad frames, venturi assembly and any unsecured objects are removed beforehand.

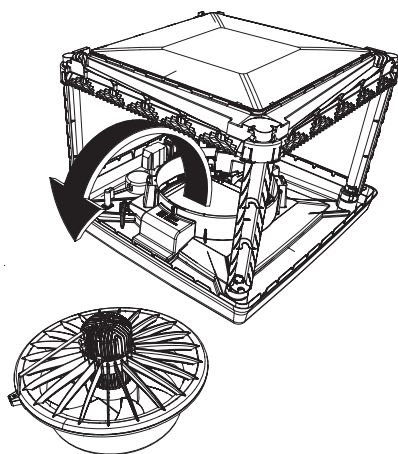


ILL1093

Carefully convey the cooler to the roof, avoiding scratching the unit and observing any WHS requirements. If you use a rope or sling, attach through the central tank (reservoir) hole. Do not use pillars. Do not drop the cooler. Always handle the cooler with care.

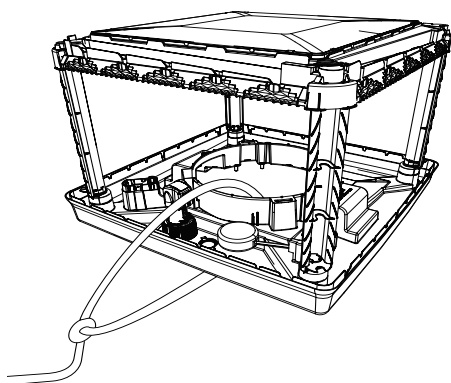

ILL1050


If you intend to pull the cooler onto the roof using a ladder as a slide, then guide the cooler on the underside of the tank (reservoir).

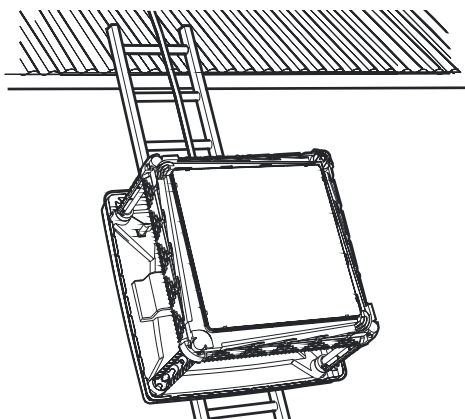

ILL1051

MOUNTING THE COOLER

Once the cooler is on the roof, carefully lift the assembly onto the transition and into place. The assembly will only fit onto the transition in one orientation. Refer to the engraved details moulded into the transition.

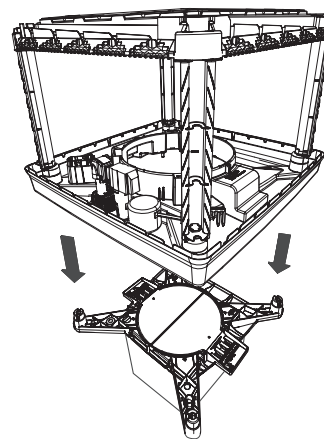

ILL1052

Ensure that the clips in all four corners engage correctly. Do not use any screws to fix the cooler to the transition.

Important! Do not place the venturi assembly into the cooler at this stage.


INSTALLATION INSTRUCTIONS

CABLE INSTALLATION

Your installation kit includes the power and control cables.

Pass the taped end of the wall control cable through the conduit adaptor (factory fitted in the transition) and leave about 0.5m (20") in the water tank (reservoir).

Take the power cable and drop the non-plug end down the hole where the electronics module was and pass it through the conduit adaptor. **Important!** Pass the wall control cable through the conduit first.

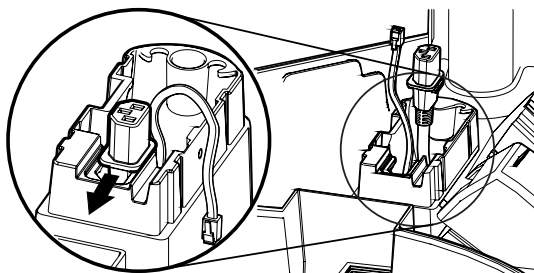


ILL1288

Lock the power cable socket in place by sliding the plug in sideways into the tank as shown. The plug will only insert one way, with the chamfered end first. For now, leave the control cable end in the tank as it will be connected later.

WARNING! Do not let cables, cable ends, or the control box get wet.

Now pass the cables through your main conduit and connect the main conduit to the conduit adaptor (under the transition).

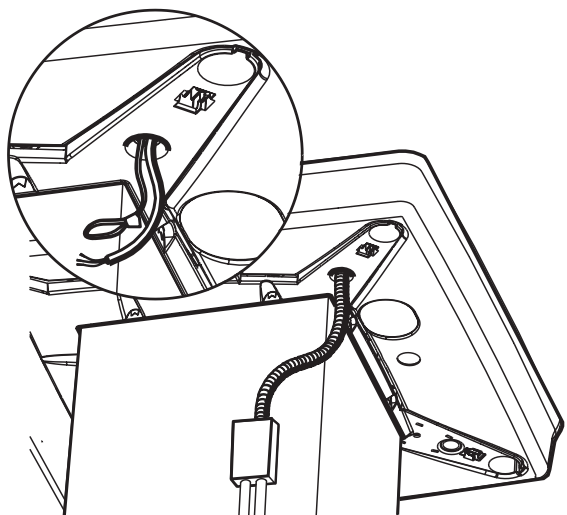


ILL1181-A

Terminate the power cable in a junction box installed nearby. The fixed wiring must be fitted with an isolation switch that breaks the active (hot) and neutral (common) in accordance with local wiring rules. We recommend the junction box be located and installed on the duct.

Do not penetrate the duct near the Weatherseal.

Note! The maximum length for the wall control cable to travel alongside the power cable is 10m (33').

INSTALLING THE VENTURI / FAN ASSEMBLY

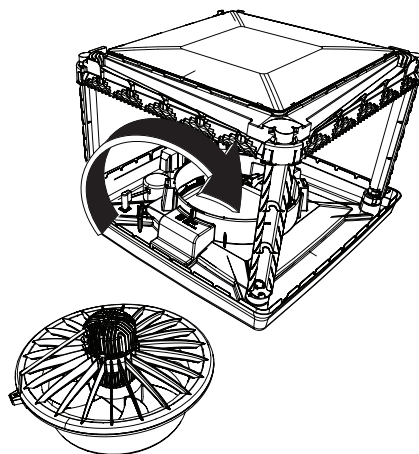


ILL2116

Ensure the venturi is sitting flat in the tank (reservoir).

Important! Ensure the plug/lead assembly is not caught under the bottom lip of the venturi during installation by holding it out of the way.

Carefully lift the venturi/fan assembly into position inside the tank (reservoir). Rotate the venturi until the 2 ribs on the venturi are in the locating ribs in the tank (reservoir). The 2 venturi securing screws do not need to be re-fitted.

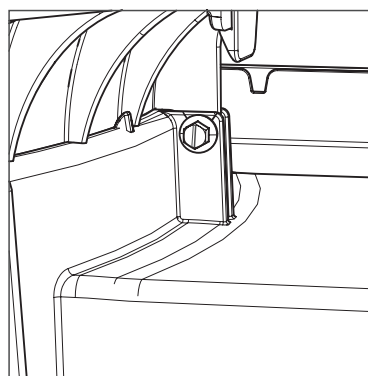

ILL2111

WATER REQUIREMENTS

Installation of the cooler water supply must conform to local plumbing rules, regulations and standards.

The following specifications for the cooler water supply are required:

Water Connection	½" BSP
Min Water Pressure	100kPa (15psi)
Max Water Pressure	800kPa (115psi)
Min Water Flow	8 litres/min (2.1 gallons/min)
Max Water Temperature	40°C (104°F)

Important! If the water pressure exceeds maximum specification then a pressure reducing valve is required and must be supplied and fitted by the installer.

A permanent water supply is required to be connected to the cooler. The water connection point is located on the underside of the cooler.

You must install a manual 1/4 turn ball type shut off valve (do not use a stop cock) in the water supply line adjacent to the cooler, subject to local plumbing regulations. This allows the water supply to be isolated whenever work needs to be done on the cooler.

The water connection is a 1/2" BSP compression fitting or a 1/2" BSP to 1/4" compression fitting. This can fit directly onto the water pipe or be screwed directly onto the manual water shut-off valve.

Always ensure that the water pipe connection does not place sideways strain onto the float valve.

Important! In areas subject to freezing, the water supply line to the cooler requires a drain down facility at the lowest point in the water supply pipe.


Important! Flush the water pipe to remove any swarf before final fitting. Swarf can lodge in the solenoid and float valve, preventing them from functioning correctly.

INSTALLING THE FLOAT VALVE

Assemble the float valve to the cooler as shown.

Ensure all washers and o-rings are in place. No thread tape is required. Do not over-tighten the plastic fittings.

Make sure the float is centrally positioned and up and down movement is unrestricted.

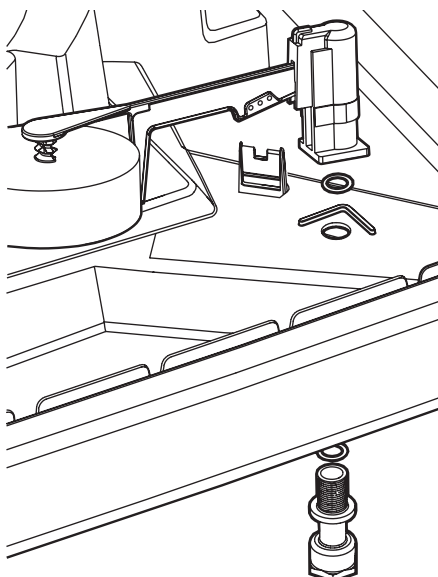

ILL985


INSTALLING THE INLET SOLENOID

For coolers fitted with a drain and solenoid valve, it is a requirement to fit the new detachable hose set supplied. Any old hose sets should not be re-used.

Screw the solenoid valve into the extension tube.


Note! Tighten the solenoid valve until it seals against the rubber washer and is in the orientation shown such that the solenoid cover will clip on over the top.

The water solenoid is required to be installed in the direction of flow as per the arrow indicator on the solenoid.

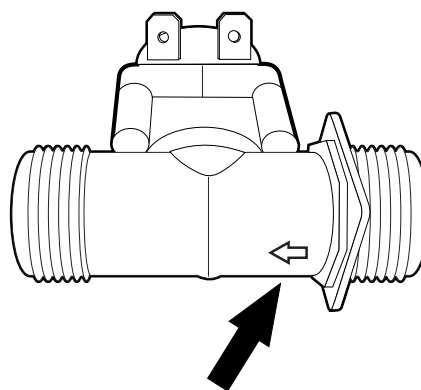


ILL1676

Connect the supplied cable to the solenoid valve, then push the other end through the hole in the transition as shown. Pull the cable through from inside the cooler and route the cable as shown. This will be connected later.

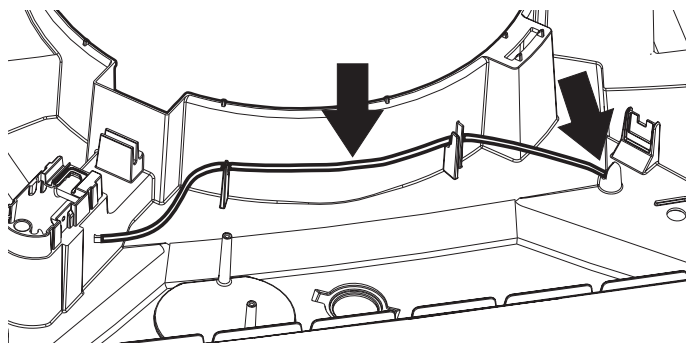

ILL414

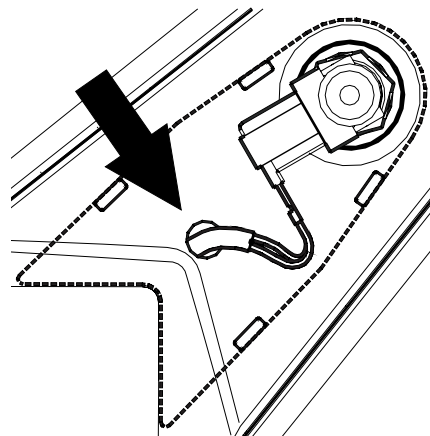

ILL993


Clip the solenoid cover in place and connect the flexible hose to the mains water supply.

WATER REQUIREMENTS

INSTALLING THE WATER SENSOR

Assemble the water sensor as shown by clipping the sensor to the tank (reservoir). Ensure that the clip fully engages.

Route the sensor cable through the cable supports in the tank (reservoir) as shown and leave the end clear of any water. The cable will be plugged in later.

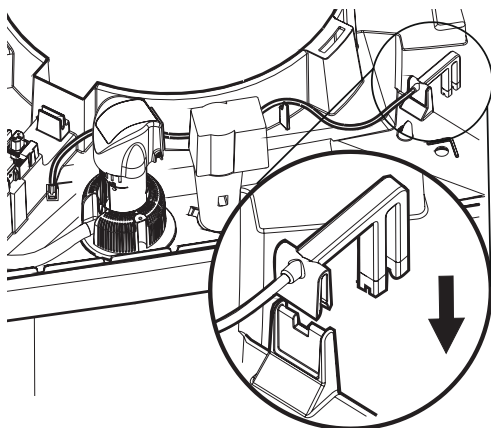


ILL1056

MAINS WATER CONNECTION

Connect the main water supply to the water inlet point under the cooler using the 1/2" BSP Nut and olive fitting or 1/2" BSP - 1/4" brass compression adaptor fitting as required.


Always install a shut-off valve (do not use a non-return type valve) close by the air cooler.

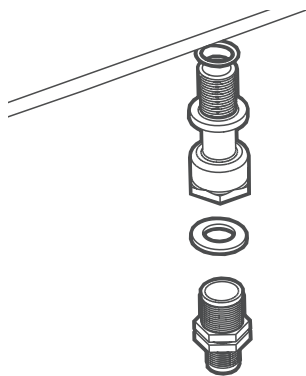

ILL972

INSTALLING THE DRAIN VALVE

Water drained from the cooler must be carried away to a suitable discharge point in accordance with local regulations. Important! Never drain water from the cooler directly on to the roof. Assemble the drain valve (1) as shown:

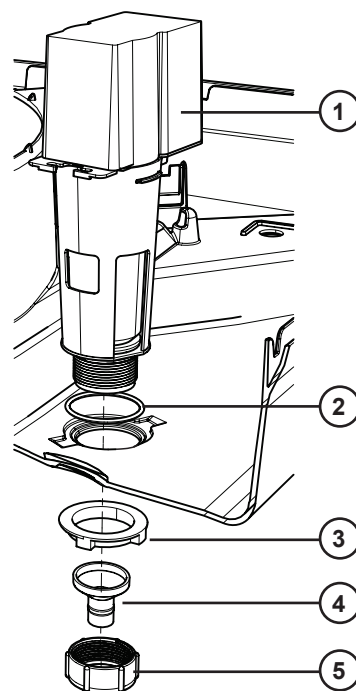


ILL746

Ensure the "O"-ring (2) is fitted to the drain valve spigot and this is seated inside the tank (reservoir). Screw the smaller nut (3) up tightly by hand to fix in place. Locate the funnel (4) against the bottom of the drain valve spigot thread and secure with the larger nut (5). Ensure that you use the correct drain adaptor.

Important! Do not over-tighten plastic fittings.

Tundish Installations

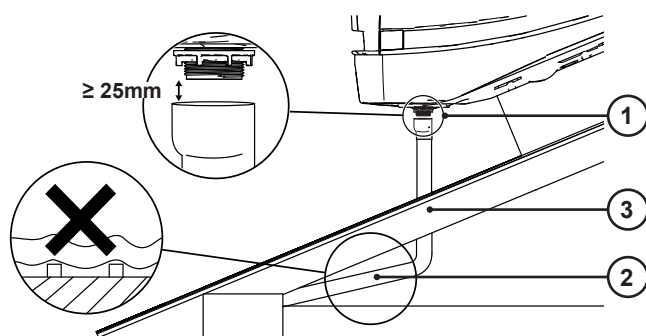


ILL3920

Installations with outlet hoses larger than Ø 20mm I.D. should have an installer supplied tundish (1) fitted under the drain outlet with a minimum of 25mm air-gap to improve serviceability and warranty.

Ensure the drain pipe (2) has a constant slope towards the ground, so water discharges freely away from the cooler. Ensure no air traps can occur due to pipe sag.

Ensure the pipe is secured to the roof (3) with C-clamp or similar.

ELECTRICAL REQUIREMENTS

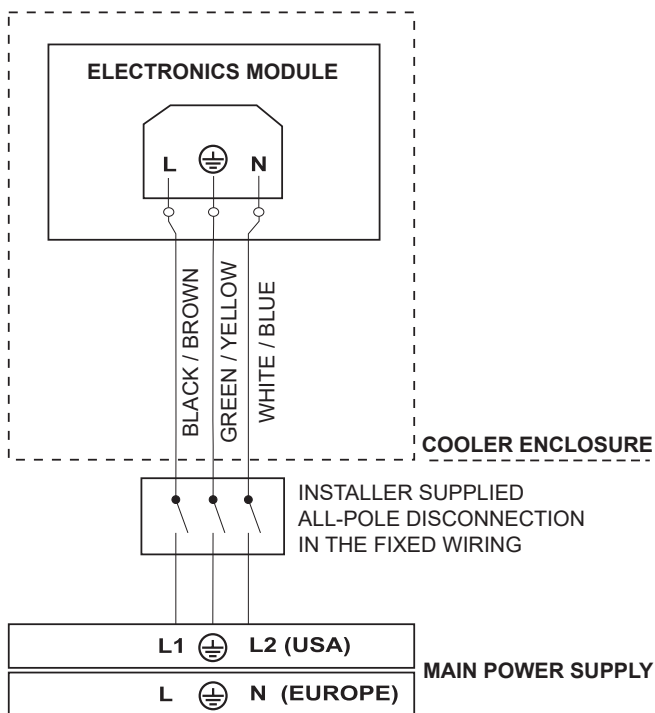

ILL3102

Installation of the cooler must conform to local electrical rules, regulations and standards.

Important! It is a requirement of Seeley International that all coolers be connected to a dedicated circuit to the distribution board, with a separate circuit breaker and incorporate means to ensure all-pole disconnection from the supply mains, in accordance with local and national wiring rules.

The following specifications for the cooler electrical supply are required: **115V / 60Hz**


The electronics module is fitted with an anti-surge fuse.

WARNING! If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

ELECTRICAL CONNECTION

Connect the motor cable to the base of the electronics module. It is a polarised plug and will only insert one way. Ensure it is secured fully so that its retention clips are engaged.

Route the end of the wall control cable out of the cavity via the same channel as the motor cable. Ensure you have about 200mm (8") of wall control cable outside the cavity.

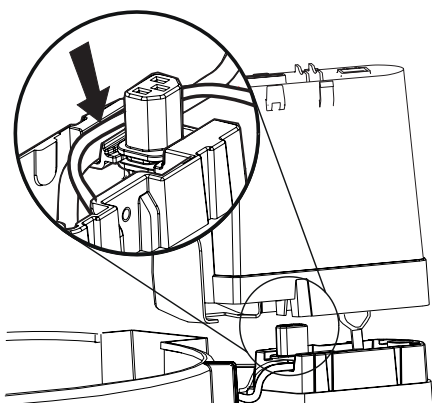


ILL496

With both cables in place (inside the channel), re-assemble the electronics module and screw it to the tank (reservoir).


Important! The isolation switch cannot be activated unless this screw is fixed in place.

Switch OFF the electronics module before connecting any accessories.

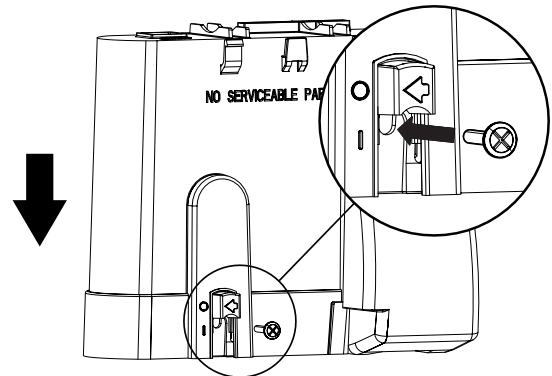


ILL1060

Connect the water sensor plug (F) and inlet solenoid plug (G) as shown.

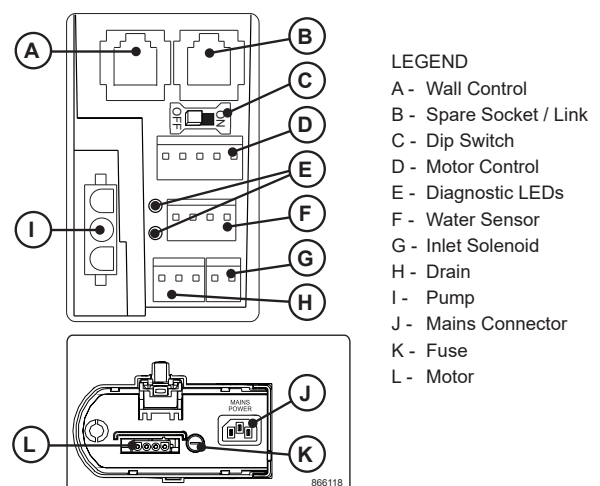


ILL2119

Route the drain valve cable as shown before connecting it to the electronics module (E).

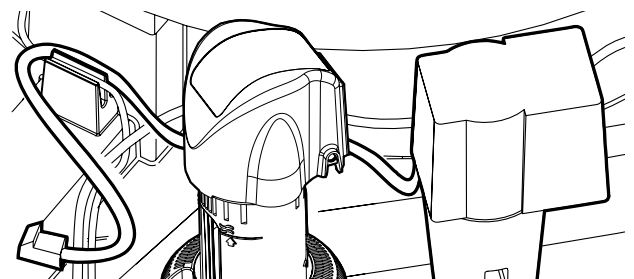

ILL1075

Ensure the cables cannot rest in the water once the tank (reservoir) is filled and plugs are connected in the correct orientation.

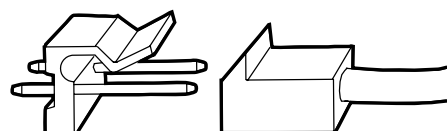


ILL1678

ELECTRICAL REQUIREMENTS

MULTIPLE COOLER INSTALLATIONS


Multiple coolers can be linked together using a common MagIQtouch wall control.

Ensure all cooler electronics dipswitches are set to 'OFF' except for the last cooler in series. The last cooler dipswitch should be switched to 'ON' to ensure communication reliability.

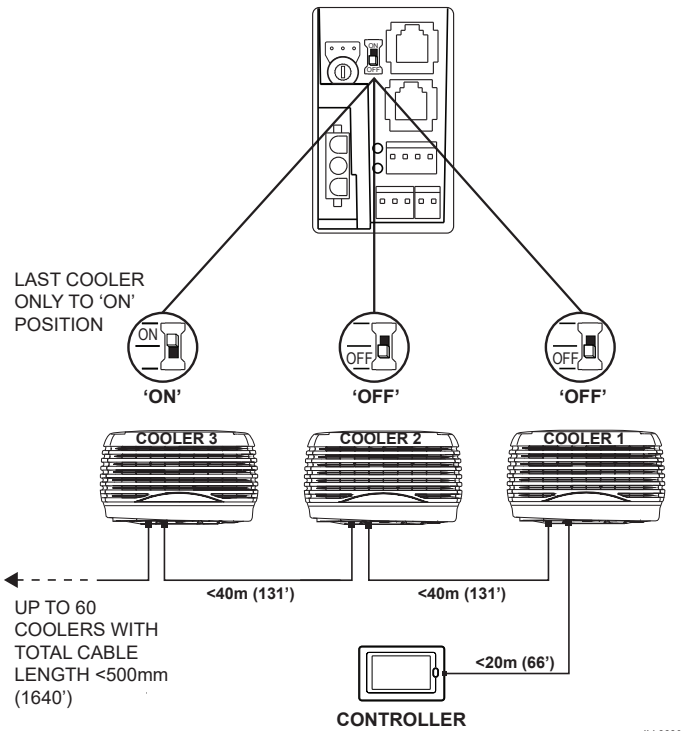

CONNECTING THE WATER PUMP

Route the pump cord as shown.

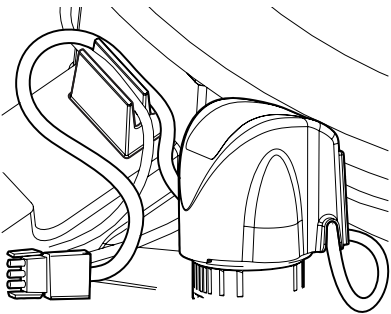

ILL1061


Once the water level is set correctly, isolate the electronics module and connect the pump plug.

Important! Do not connect the pump plug until the water level is set.

WARNING! Do not run the pump while the pad frames are off and the fan is on.


Once plugs are connected, switch the electronics module on.

Important! Ensure the flexible splash protection cover is in place.

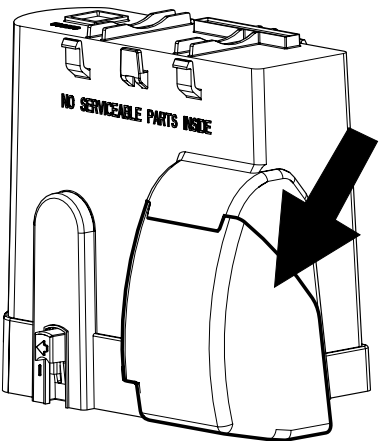

ILL1095

Connect the pump plug (I) as shown

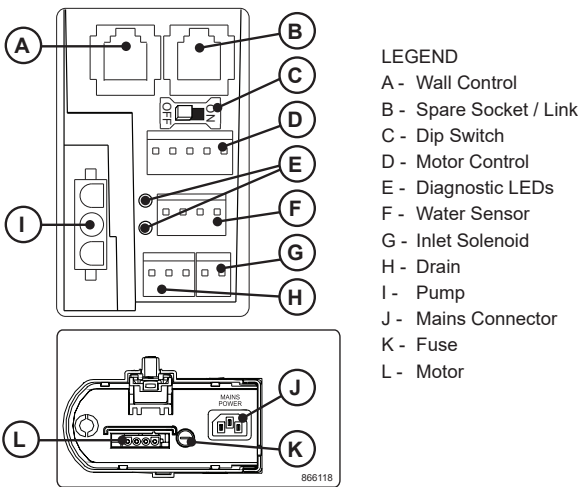

CONNECTING THE MAGIQTOUCH CONTROLLER

Refer to the installation manual provided with the MagIQtouch Controller for instructions on installing the controller. The wall control cable plugs into the electronics module - (A) (refer diagram adjacent). Coolers are supplied with a 20m (66') control cable. Longer cable lengths are available from Seeley.


Important! The maximum cable length allowed from the MagIQtouch Controller to the first cooler is 20 metres (66'). For any additional coolers added into the system with a link module the maximum allowed length is 40 metres (131'). Therefore, failure of the product or components to operate correctly due to modification to supplied cables, or the use of non-approved cables will NOT be accepted under the Manufacturer's Warranty.

We have this cable available through our Sales order office and spare parts outlets in the following lengths:

Part No.	Length	Details
833880	20m	MagIQtouch Controller Cable (No Ferrite)
823553	20m	MagIQtouch Controller Cable EXQ/EXS (With Ferrite)
862873	1.5m	MagIQtouch Controller Cable (No Ferrite)
861265	3m	MagIQtouch Controller Cable (No Ferrite)
864396	30m	MagIQtouch Controller Cable EXQ/EXS (With Ferrite)
864402	40m	MagIQtouch Controller Cable EXQ/EXS (With Ferrite)


MAGIQTOUCH CONTROLLER DISPLAY INFORMATION

Diagnosis and cooler operating information can also be viewed from the MagIQtouch Controller. Faults are displayed on the screen as they occur.

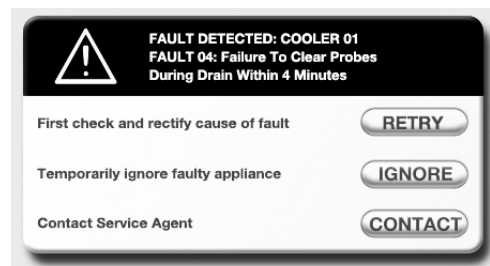

ILL1714

Cooler operating information is available from the 'Service Operating Screen' under the COOLER tab of the SETTINGS menu.

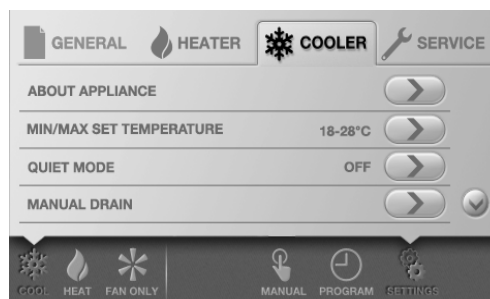

ILL1664

SETTING THE WATER LEVEL

Isolate power to the cooler electronics and disconnect the pump, making sure the plug is kept away from any water. Turn the power back on.



ILL1663

Turn on the mains water supply to the cooler.


Turn the cooler on at the controller, in "COOL" mode.

Adjust set temperature slider / fan speed buttons to be close to current room temperature so that fan speed remains low.




ILL1615

Allow the tank (reservoir) to fill with water. The float valve will eventually stop the water from entering the cooler. Wait for this to happen and check the water level.

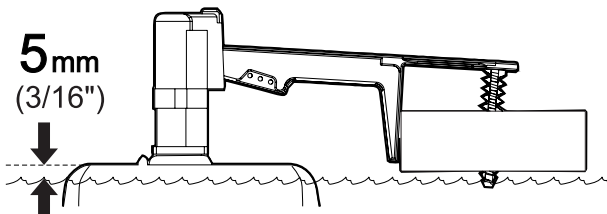

ILL997

If the level is too high rotate the float clockwise. Drain some water from the tank (reservoir) and allow it to refill to the new set point. If too low rotate the float in an anti-clockwise direction. The correct water level is approximately 5mm below the surface of the tank (reservoir) the float valve is mounted on. It is advisable to check the water level again after the float valve washer has "bedded in".

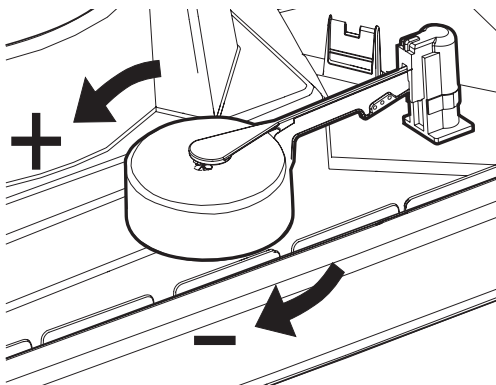

ILL998-D


Once the water level is correct, isolate the control box and connect the pump plug.

COMMISSIONING THE COOLER

TEST OPERATION

Check that the green light on the electronics module is on and double flashing every 2 seconds. This indicates that power is connected to the electronics module.


Important! Ensure the flexible splash protection cover is put back in place.

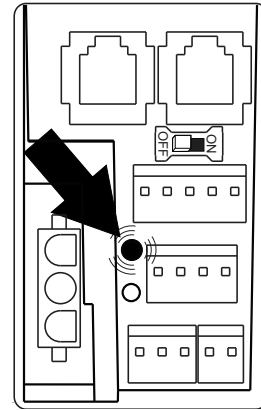

ILL2120

REFITTING THE PAD FRAMES

Refit the pad frames by locating the bottom edge in the tank (reservoir) groove, then push the top into the lid.

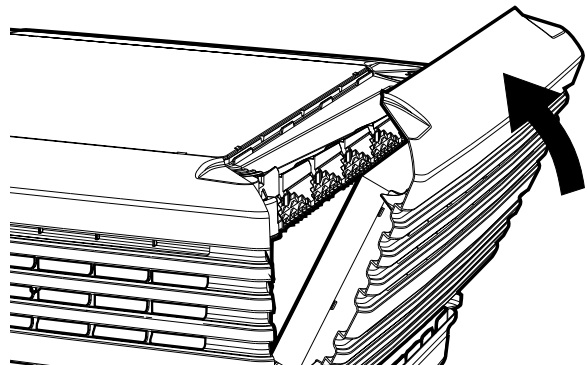

ILL976-D

TESTING THE PUMP

Test the pump by turning the cooler on at the controller, in "COOL" mode. Check that water is evenly distributed to all pads.

Note! If the cooler has not been on before it will run a "Pre-Wet" routine where the pump will operate to saturate the pads. This cycle takes 2 minutes, then the fan will start automatically.

TESTING THE DRAIN VALVE

Select the "SETTINGS" mode on the MagIQtouch Controller and select the "COOLER" sub-heading. Select the "MANUAL DRAIN" option to operate and test the drain valve.



ILL1664

COMMISSIONING THE COOLER

COMMISSIONING COMPLETION CHECKLIST

COOLER

- ☐ SECURE - The cooler is secure and level on the dropper (roof jack) using all fixings supplied.
- ☐ SEALED - The dropper (roof jack) and all penetrations are correctly flashed and sealed.

WEATHERSEAL

- ☐ OPERATES - The Weatherseal operates correctly and can open and close without interference.

PLUMBING

- ☐ FLUSHED - The water pipes were flushed of any foreign materials before connection to the cooler was made.
- ☐ NO EXTERNAL LEAKS - The water is connected with no leaks at fittings.
- ☐ NO INTERNAL LEAKS - Check the internal water hose is securely fitted to water distribution spreader on the lid and to the pump.
- ☐ SECURE - Water pipes are correctly saddled as per plumbing regulations.
- ☐ OWNER INSTRUCTIONS - The owner has been instructed on how to isolate the water to the system in case of emergency.

DRAIN VALVE

- ☐ INSTALLED - The drain valve is installed correctly, as detailed in this installation manual.
- ☐ DISCHARGE - The drain water does not discharge onto the roof surface.
- ☐ WATER LEVEL - Water level has been set correctly, as detailed in this installation manual.
- ☐ TESTED - Drain the tank (reservoir) manually. Check the drain fittings and pipes, making sure there are no leaks.

POWER

- ☐ REGULATIONS - The power supply adheres to all local and national regulations and is wired back to the distribution board on its own separate circuit.
- ☐ CHECK CABLES - Cables have been correctly connected to the control boxes:
 - ☐ Power supply
 - ☐ Motor cable(s)
 - ☐ Control cable
 - ☐ Drain valve
 - ☐ Solenoid cable
 - ☐ Pump cable
 - ☐ Probe cable
- ☐ OWNER INSTRUCTIONS - The owner has been instructed how they can electrically isolate the unit at the meter box in case of an emergency.

DUCTWORK

- ☐ NO LEAKS - All ducts are hung correctly and there are no air leaks.
- ☐ CONTROLLER SEALED - All wall holes behind the controller have been sealed.
- ☐ QUIET - Check that the cooler runs quietly and with an even distribution of air to all outlets.
- ☐ AIRBALANCE – The air balance for all outlets has been adjusted to the customer's satisfaction.

FLUSHING CHILLCEL PADS

- ☐ PADS FLUSHED - To prevent initial start-up odours from the cooling pads, it is a requirement to flush water through them and drain the tank (reservoir). Operate in COOL mode, lowest speed for 5 minutes, then drain the tank (reservoir). Repeat several times if necessary.

FINAL TEST

- ☐ Once you are satisfied that the cooler is installed and commissioned correctly, run the cooler and ensure that everything is working as it should.

CUSTOMER HANDOVER

- ☐ Principles of Ducted Evaporative Cooling explained.
- ☐ How far the windows need to be opened.
- ☐ How to turn the cooler on.
- ☐ How to operate the controller.
- ☐ How to drain the cooler.
- ☐ How to turn the power and water off.
- ☐ Maintenance requirements.
- ☐ The customer has been given the Owner's Manuals & Warranty Card.

CLEAN-UP


- ☐ All the installation rubbish has been removed and, if applicable, any property damage repaired. Your aim should be to have the customer not even be aware that you have been on site.

FINAL CHECK

- ☐ With all side panels in place and the unit running for a short period in cooling mode, ensure all pads have even water saturation and there are no visible water leaks

ADJUSTING COOLER SETTINGS

Within the SETTINGS menu of the MagIQtouch Controller is the COOLER sub-heading. Here various settings of the cooler can be adjusted.

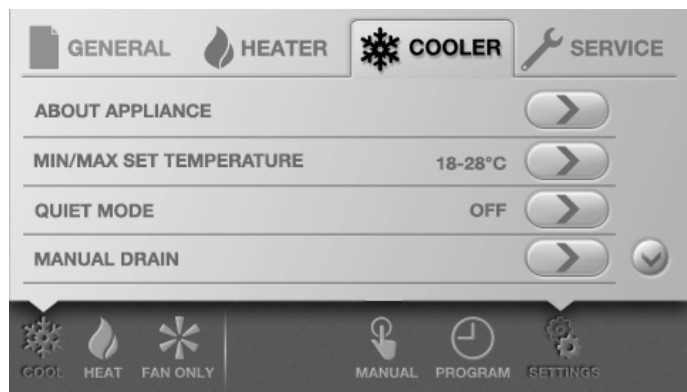

About Appliance

Displays information such as model number, serial number and software version for all coolers connected to the controller.

Quiet Mode

Restricts fan speed to a specified level during a specified night period.

Manual Drain

Turns cooler off and drains the tank (reservoir).

Pad Flush

Turns cooler off and runs pump for a specified amount of time.

Auto Restart

By turning this option to 'ON', the cooler will automatically restart after a power failure.

Drain and Dry

Cooler will drain and fan will run for 1 hour every day at a specified time.

Water Manager

Select the preferred water management method:

- Salinity Measurement - replaces water when salinity level reaches set point.
- Timed Drain - drains the tank (reservoir) after 8 tank (reservoir) fill cycles or every 65 minutes (system dependant).
- No Drain Control - salinity control external to electronics eg. continuous bleed.
- No Water Thermostatic - allows thermostatic control in VENT mode. No water present. Cooling performance is limited.

Weatherseal Open Speed

The cooler fan will turn on at the specified Weatherseal opening speed for the first 10 seconds each time it starts up. It will then return to the set fan speed.

Prewet

When COOL mode is activated, the pump will run for 90 seconds before the fan is switched on.

Salinity Level

Sets the salinity level at which the tank (reservoir) will drain in "SALINITY MEASUREMENT" mode.

Tank Drain Delay

Sets the time delay before the drain valve opens after the pump in the cooler is turned off.

FAULT CODES

Fault codes are indicated by LED's on the Cooler Electronics Module.

Fault Code 01 (1 Red Flash) = Communication Failure.

- Ensure wall control cable is fitted correctly.
- Check the wall control cable is in good condition.

Fault Code 02 (2 Red Flashes) = Failure to detect water at probes within 20 minutes.

- Ensure water pressure is sufficient to fill and maintain the tank (reservoir) to specified level within 20 minutes.
- In areas of hard or polluted water, blockage of the strainer/filter in the water inlet solenoid valve may restrict water flow.
- Water level set too low. For Braemar coolers the water level should be set to 5mm below the float valve base.
- Ensure probe plug is properly connected.
- Plug connections at electronic module are upside down or misaligned.
- Water too pure for the probes to sense water is present.
- Pressure build up in pipes can lock up the solenoid valve when a non-return isolation valve is used in the water supply line. It is recommended to use a ball valve, i.e. NOT a non-return type of shut off valve.
- Check drain valve is closing and not cycling due to debris being caught under drain valve washer.

Fault Code 04 (4 Red Flashes) = Failure to clear probes during drain within 20 minutes.

- Check the drain valve opens and water drains from the tank (reservoir), with nothing obstructing the outflow of water. (e.g. drain hose kinked)
- Excessive drain hose lengths or bends cause air locking and won't allow water to drain.
- Build up of foreign material in drain hose not allowing water to drain away correctly.
- Screws used to fix drain hoses to drain adaptors restricting water from draining from tank (reservoir).
- Drain valve has failed to open when drain was initiated.
- Inlet water solenoid not shutting off water when the drain is open.
- Water will only flow one way through the inlet water solenoid valve. Therefore, it must be installed correctly. Directional arrow must be pointing towards the float valve assembly. If not, water will not shut off. (Directional arrow can be found on the bottom of the solenoid valve body).
- Debris interfering with water sensor probes.
- Probes not clipped onto mounting brackets correctly.
- Check cooler is level and water drains quickly.

Fault Code 07 (7 Red Flashes) = Motor Error.

This fault is triggered when the inverter module cannot communicate with the control, re-connect the motor COMMS cable to electronics module and try to restart the cooler.

TROUBLE SHOOTING

Symptom	Cause	Action
Inadequate cooling	Under-sized cooler.	Replace with larger cooler.
	Under-sized ducts.	Carry out cooling load design to determine correct size unit, ducting and outlets required.
	Clogged or dirty cooling pads.	Clean or replace pads.
	Dry pads or lack of water while cooler is operating.	Check water distribution system for possible obstruction in hoses. Check pump.
	Insufficient air discharge openings or inadequate exhaust from building, causing high humidity and discomfort.	Make sure there is adequate provision for exhausting stale air from building (open windows and doors).
	Excessive ambient humidity (see also item above re inadequate exhaust).	On days during summer when ambient humidity is high the cooler will not reduce the temperature as much as on drier days. There is no remedy except to shut off the pump.
Noisy cooler	Fan out of balance due to dirt, etc.	Clean the fan.
	Too much back pressure. Tight duct bends. Grilles too small.	Re-evaluate design; improve duct layout; change grille sizes.
Pump fails to operate.	Circuit breaker tripped.	Check pump for faults. Replace if necessary.
	Pump motor failure.	Replace pump.
Fan fails to start.	Main power circuit breaker tripped.	Check cause of overload. Reset circuit breaker.
	Fan motor burned out.	Replace motor.
	Low system voltage.	Consult with power supply authority.
	Check fault condition via the tri-colour LED on cooler electronics module.	Rectify fault as indicated and restart the cooler.
	Controller failure.	Replace controller.
Pump runs but no water circulation or Pump runs but pads lack water	Insufficient water in tank (reservoir).	Adjust float level.
	Water hoses blocked.	Check and clean out blockage.
	Pump strainer blocked.	Clean pump strainer.
	Insufficient water supply pressure.	Check and confirm water supply pressure
	Water solenoid is installed incorrectly.	Check installed in the correct water flow direction
Continuous overflow of water.	Float valve adjustment not correct.	Adjust float valve.
	Heavy pad deposits.	Clean or replace pads.
	Drain valve failure.	Replace drain valve.
	Water solenoid is installed incorrectly.	Check installed in the correct water flow direction
Water entering cooler outlet.	Loose water hose connections.	Tighten connections.
	Water hose broken.	Replace cracked or broken hoses.
	Cover not fitted on float valve.	Replace float valve.
	Pads not fitted correctly into pad frames.	Install pad frame correctly.
	Incorrect or damaged pads.	Replace with new Chillcel pads.
Unpleasant odour.	New cooler pads.	Fill tank (reservoir), run pump for a short period to wash pads, drain tank (reservoir), refill and repeat several times if odour persists. Odour will dissipate after a number of hours of operation.
	Cooler located near source of unpleasant odour.	Remove source of odour or relocate cooler.
	Algae in tank (reservoir) water.	Drain pan, clean thoroughly with strong cleansing agent, refill, change pads.
	Pads remain wet after shut down.	Run fan on "vent" for 10 minutes after cooling cycle to dry pads out.
	Heavy pad deposits.	Clean or replace pads.



Warranty Service

Australia: 1300 650 644

New Zealand: 0800 589 151

Seeley International Technical Support

Australia: 1300 650 399

New Zealand: 0800 589 152

For all other regions, contact your local distributor:

seeleyinternational.com

Online Support Portal (AUS/NZ)

Scan or Click QR Code



It is the policy of Seeley International to introduce continuous product improvement.

Accordingly, specifications are subject to change without notice.

Please consult with your dealer to confirm the specifications of the model selected.